



Mustang GT5000 Style
Kids Ride on Car
Operation and Instruction Manual



Please read this instruction manual carefully. It is important to read and follow all of the steps during assembly to ensure proper operation and safety of the child. Please keep this manual for future reference.




**Scan this QR
Code to view our
assembly video**

SPECIFICATIONS:

Car Type:	Mustang GT5000 Style
Battery Type:	12V7AH
Electric Motor:	12V30W(Drive)
Age Range:	2 – 5 Years
Max. Weight:	65 lbs
Product Size:	54"L x 29"W x 29"H
Avg. Speed:	2 – 4 MPH
Charging time:	8-12 hrs
Avg. Use Time:	1-2 Hrs (depending on use)
Remote Battery:	2 - AA (not included)

IMPORTANT!

<ul style="list-style-type: none"> Assembly of car and charging of battery is only to be done by an adult.  	<ul style="list-style-type: none"> WARNING!! NOT TO BE USED ON STREETS or IN TRAFFIC.
<ul style="list-style-type: none"> Never modify the electric circuit system or tamper with electric system. This can cause permanent damage. 	<ul style="list-style-type: none"> Please check the product regularly for any loose parts or wires to ensure proper operation.
<ul style="list-style-type: none"> Adult supervision is recommended during operation by child to avoid injury. Safety equipment is recommended. 	<ul style="list-style-type: none"> Please make sure that the child uses caution to avoid falls and collisions, which could cause injury to the child or third party.
<ul style="list-style-type: none"> Do not pick up vehicle by steering wheel. 	<ul style="list-style-type: none"> Do not pick up battery by wires or charger.
<ul style="list-style-type: none"> Keep all plastic bags out of the reach of young children. 	<ul style="list-style-type: none"> Not recommended for children under the age of 2 yrs. due to small parts that could cause a choking hazard.
<ul style="list-style-type: none"> Battery must be charged for a minimum of 8-12 hours prior to first use of the car to avoid damage to the battery. Power switch must be in off position when charging. 	<ul style="list-style-type: none"> Battery charger should be examined for damage prior to each use. It is important to inspect the cord and both ends for damage. If damage is found, DO NOT USE THE CHARGER! Contact us for replacement charger.
<ul style="list-style-type: none"> Please retain instruction manual for future reference. 	<ul style="list-style-type: none"> Please retain packaging in the event it is necessary to return.


If the charger is plugged into the charging port, the car will not power up regardless if the charger is plugged into the wall outlet or not.

Packing List

NAME: Main body QTY:1pc		NAME: Windshield frame QTY:1 pc	
NAME:Seat QTY:1pc		NAME:Steering wheel QTY:1 pc	
NAME:Tire QTY:4pcs		NAME:Remote controller QTY:1pc	
NAME:Rearview Mirror QTY: 1 pair		NAME:Charger QTY:1pc	
NAME:Screw bag QTY:1 bag		NAME : Sticker QTY:1 pc	
NAME Manual QTY:1 pc			

Accessories of the screw bag			
NAME	QTY	PICTURE	PURPOSE
A $\phi 5 \times 55$ machine screw	1		Lock the steering wheel
B Nut with cap	1		
C $\phi 4 \times 12$ screws	2		The handle of the seat tires
D $\phi 12$ gasket	4		


1. Main Body
2. Front Frame
3. Steering Wheel
4. Seat
5. Backup Mirror
6. Wheel Cover
7. Tire

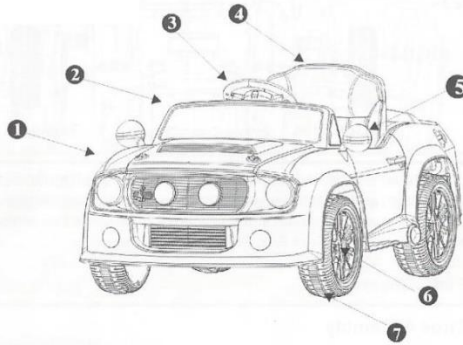

ASSEMBLY INSTRUCTIONS:



Please Note: Some parts in the instructions below may have been installed at the factory. Please disregard any of the instructions below if the part was installed at the factory.

1. **Remove car from box and plastic.** Lay out all parts to be assembled. Unplug and remove both motor/gearboxes from the battery area. Turn car upside down so that the bottom of the car is facing up.

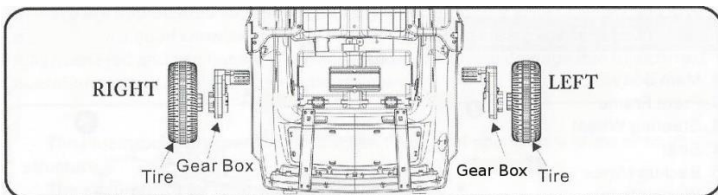


2. **Install rear wheels & motor/gearbox on rear axle:** Apply thin coat of lubricating grease (supplied) evenly over approximately 4" of each end of the rear axle. Install the motor/gearbox over the rear axle while feeding the electrical connector and motor through the hole in the body. The motor marked with an "R" should be installed on the right side of the car (when the car is right side up and you are facing the car from the rear). Slide one tire on the axle at each end with the hub of the tire closest to the body of the car. While sliding on the tire, press the center of the wheel and line up the hub with the corresponding sleeve on the gearbox. Once the


tire is slid completely on the axle, release the center button of the wheel to lock the wheel into place

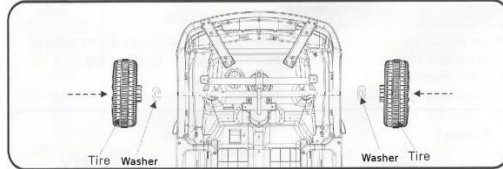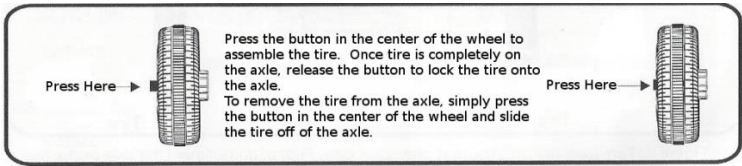


- 3. Install the Front Wheels:** Apply thin coat of lubricating grease (supplied) evenly over approximately 4" of each front axle. Slide one tire on each front axle. While sliding on the tire, press the center of the wheel, once the tire is slid completely on the axle, release the center button of the wheel to lock the wheel into place.

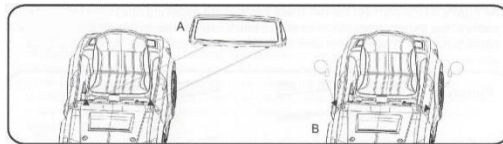

- 4. Install windshield and exterior mirrors:** Align the tabs on the bottom of the windshield with the slots in the body of the car in the normal position of the windshield. Press down firmly to snap the windshield into place. Put mirrors into place on the body. Press down firmly until a clicking sound is heard, (letting you know they have snapped into place).

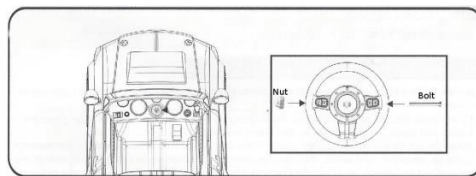

- 5. Install Steering Wheel:** Connect electrical connection between the steering wheel and the wires from the car. Slide steering wheel onto the steering shaft. Align the screw hole in the steering shaft and the steering wheel and slide the bolt through the hole. Apply the nut to the end of the bolt and tighten until snug.

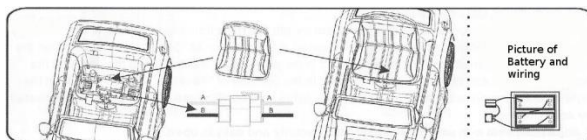

- 6. Connecting the Battery:** Slide red wire with spade terminal onto the red or positive (+) side of the battery. Slide the black wire with spade terminal onto the black or negative (-) side of the battery. DO NOT INSERT THE RED WIRE ONTO THE BLACK

OR NEGATIVE SIDE OF THE BATTERY! Connect the plastic connector from the battery to the corresponding plastic connector from the control box of the car.

Pairing your remote control to your car: Please read all steps prior to pairing. Locate the pairing switch (located in the battery area, between the battery and the control box). Press and hold the pairing switch, then press and hold the power switch on the dash until one side of the lighted ring around the switch starts to flash. Once this ring starts to flash, it is no longer necessary to hold the power switch or the pairing switch. Within 5 seconds from releasing the switches above, turn on the remote controller. The controller will automatically pair with the car at this point.


Installing the seat:

Once all connections are made, align the tabs on the back of the seat with the slots in the body of the car. Once seat is in place, rotate handle under front of seat to lock into place (as shown in previous photo).

Charging the battery: The charging port is located just under the front portion of the seat. Plug the charger into the charging port first, then plug the charger into wall outlet. **BATTERY MUST BE CHARGED FOR A MINIMUM OF 12 HOURS BEFORE INITIAL USE TO AVOID DAMAGE TO THE BATTERY.**


Once battery is fully charged, disconnect from charger. Depress power button to turn on the car. Once power is on, all lights light up, accompanied by the sound of the engine (if no sound is heard, turn up the volume). To move the car forward, forward/reverse switch must be set to the forward position and to move the car backward, the switch will need to be set to the reverse position. To operate the car using the remote control, remote control/manual switch must be set to the remote-control position.


The buttons found on the steering wheel are for the horn and the on-board music. There is a micro SD card slot located on top of the steering wheel and a volume knob to control the level of sound on the dash.

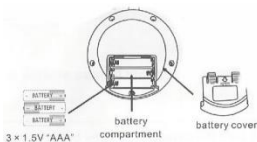

Open battery cover and put 3 x 1.5V "AAA" batteries into the compartment properly. Switch OFF the remote controller if not in use to prolong battery life

 REMOTE CONTROL BATTERY INSTALLATION: Open battery cover on the back of the remote control. Install 3 AAA Batteries as indicated inside the cover. Replace battery cover and secure with screw.

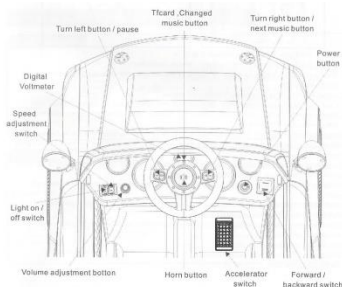




Remote Functions: Once the remote control is paired correctly to your car, please see photo for correct operation of the car.

Remote Controller Information:

 
The remote controller on this car has priority over the driver. This allows an adult to redirect the car if the child driver is heading for danger. The remote control has a range of approximately 90 feet (depending on obstructions). Once the car is out of range the remote function will no longer work. The remote control has an internal antenna, therefore creating a hassle-free experience.



The Status Indicator light:

- A. Blinks quickly: waiting to pair with remote control
- B. Blinks slowly: Indicates no signal, or indicates that the remote control is off
- C. Lights up solid: Pairing was successful with good signal from remote control
- D. Fast and slow flash: Low voltage reminder, recharge car battery
- E. Blasting flash: Battery low voltage protection. Car will not drive. Recharge battery immediately.


THE POLICE CAR VERSION OF STICKERS

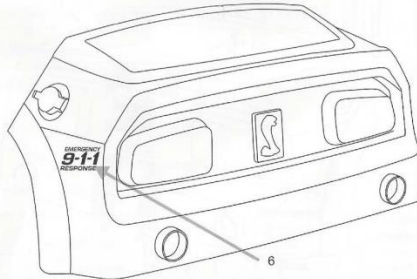

On the Right Side Sticker 3. 5. 7 Corresponding to the left Sticker 2. 4. 6

NORMAL VERSION STICKER

Front of the car body with the center line of the front cover outstanding center line to the sticker with the line in the middle of the distance to 2.5 cm, stickers on both sides distance is 5cm.

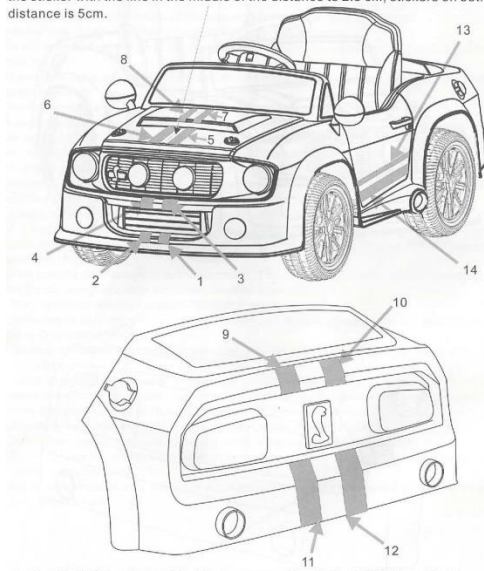

On the Right Side Sticker 15. 16 , Corresponding to the left Sticker 13. 14
Sticker(inside marks numbers) Aim at the above car figure serial number location
and direction.

TROUBLE SHOOTING GUIDE:

Problem	Possible Cause	Possible Solutions
Car will not move	<ol style="list-style-type: none"> 1. Battery voltage is low. 2. Battery connector or wires are loose. 3. Battery is damaged or dead. 4. Electrical box or motor is damaged 	Charge the battery Re-connect the battery connector to the car Replace battery Replace motor
The battery will not charge.	<ol style="list-style-type: none"> 1. Battery connector may have come apart or have a bad connection. 2. Battery charger plugged into a bad wall outlet. 3. Battery charger is damaged. 	Re-connect the battery connector to the car electrical connector Try another wall outlet Replace battery charger
Shortened battery life	Battery was not charged fully Battery is old	Charge battery fully Change battery
Some Noise and heat when charging battery	Chemical reaction	Normal
Low Speed	Battery is old Battery is low on charge Weight limit exceeded Uneven or uphill path Vehicle is being used in harsh conditions	Change the battery Charge the battery Do not exceed max weight limit Use on flat surfaces Avoid using car in harsh conditions
Noise coming from motor/gearbox	Gear in motor/gearbox broken	Call for replacement motor
The car shakes when moving	Bad Connection of the motor wires Possible motor failure	Reconnect wires Call for replacement motor
Car needs a push to go forward	Poor contact of wires and/or connectors “Dead Spot” on motor	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact the distributor’s service department A dead spot means the electric power is not being delivered to the terminal connection. Call our service department

Self-Resetting Breaker – The vehicle is equipped with a self-resetting breaker. In the event the power is tripped the breaker will reset itself in approximately one minute.

If you are unable to solve a problem, please feel free to contact us.

Phone: 402-477-0541 or Email: customerservice@rollinghillstrading.com

[All assembly videos can be found on YouTube under SPORTrax](#)

WARNING:

- Use only the rechargeable battery and charger supplied with your vehicle. **NEVER** substitute the battery or charger with another brand. Using another battery or charger may cause damage.
 - **NEVER** modify the electric circuit system. Tampering with the electric system may cause permanent damage to the system.
 - **Do not** allow direct contact between battery terminals.
 - **Do not** allow any type of liquid on the battery or its components.
 - Charge the battery in a well-ventilated area **ONLY**. Do not charge near or around flammable materials.
 - **NEVER** pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case **ONLY**.
 - Charge the battery in a dry area **ONLY**.
- Wash hands after handling.**
- **Do not** open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
 - **Do not** open the charger. Exposed wiring and circuitry inside case could cause electric shock. **NEVER** allow a child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
 - **Do not** drop the battery. Permanent damage to the battery could occur or cause serious injury.
 - Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. **DO NOT** charge the battery if any damage to parts has occurred.
 - **Do not** allow the battery to drain completely. Recharge the battery after each use or once per month if not used regularly.
 - **Do not** charge the battery upside down.
 - **Always** secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
 - The **Power Switch** must be turned in the **OFF** position when charging.
 - When the car begins to run slowly, recharge the battery.

GENERAL MAINTENANCE:

It is the parent's responsibility to check main parts of the toy before using. Regularly examine the car for potential hazard, such as damage to the battery, charger, cable or cord, and plug. Also, check that all screws are tightened throughout the car. In the event of such damage, the toy must not be used until that damage is repaired or replaced.

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult should handle the battery. Recharge the battery at least once a month when not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather as water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- For extended times when the car will not be used, the power switch needs to be in the off position and the electrical connections should be disconnected from the battery.

