

Buggy Kids Ride on Car Installation and Operation Instructions



Please read this instruction manual carefully. It is important to read and follow all of the steps during assembly to ensure proper operation and safety of the child. Please keep this manual for future reference.



Scan this QR Code to view the Assembly Video

SPECIFICATIONS:

Car Type:	Volkswagen Beetle Style	
Battery Type:	2*6V4.5AH	
Electric Motor:	12V20W (driving motor)	
Age Range:	2 – 5 Years	
Max. Weight:	65 lbs	
Product Size:	44"L x 25"W x 16"H	
Avg. Speed:	3 MPH	
Charging time:	8-12 hrs	
Avg. Use Time:	.75-1.5 Hrs (depending on use)	
Wheel Batteries:	3 – AA (N	
Remote Battery:	2 - AAA (not included)	

IMPORTANT!


ing of by an circuit ctric ration fety	 Please check the product regularly for any loose parts or wires to ensure proper operation. Please make sure that the child 	
circuit ctric ration fety	 Please check the product regularly for any loose parts or wires to ensure proper operation. Please make sure that the child 	
ctric ration fety	 regularly for any loose parts or wires to ensure proper operation. Please make sure that the child 	
ctric ration fety	 regularly for any loose parts or wires to ensure proper operation. Please make sure that the child 	
ration fety	wires to ensure proper operation.Please make sure that the child	
fety	operation.Please make sure that the child	
fety	Please make sure that the child	
fety		
fety		
	uses caution to avoid falls and	
	collisions, which could cause	
ed.	injury to the child or third party.	
•	• Do not pick up battery by wires	
	or charger.	
f the •	 Not recommended for children 	
	under the age of 2 yrs. due to	
	small parts that could cause a	
	choking hazard.	
ora 🔸	 Battery charger should be 	
ior to	examined for damage prior to	
ł	each use. It is important to	
wer	inspect the cord and both ends	
tion	for damage. If damage is found,	
	DO NOT USE THE CHARGER!	
	Contact us for replacement	
	charger.	
nanual •	 Please retain packaging in the 	
	event it is necessary to return.	
i l t	or to wer ion	


up regardless if the charger is plugged into the wall outlet or not.


PARTS LIST:

Car Body	Seat	Charger
Steering Wheel	Motor/Gearbox	Remote Control
Wheel Covers	Rear Axle	Instruction Manual
Wheels	Windshield Frame	

ASSEMBLY INSTRUCTIONS:

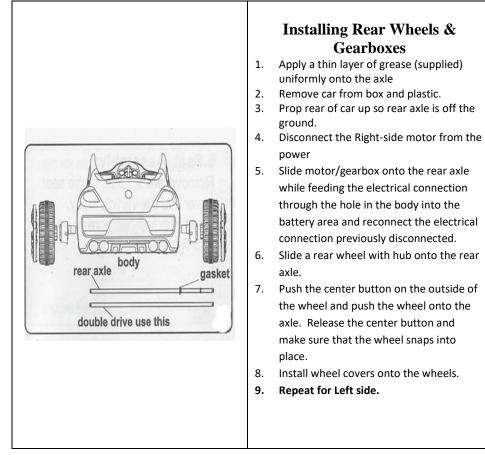


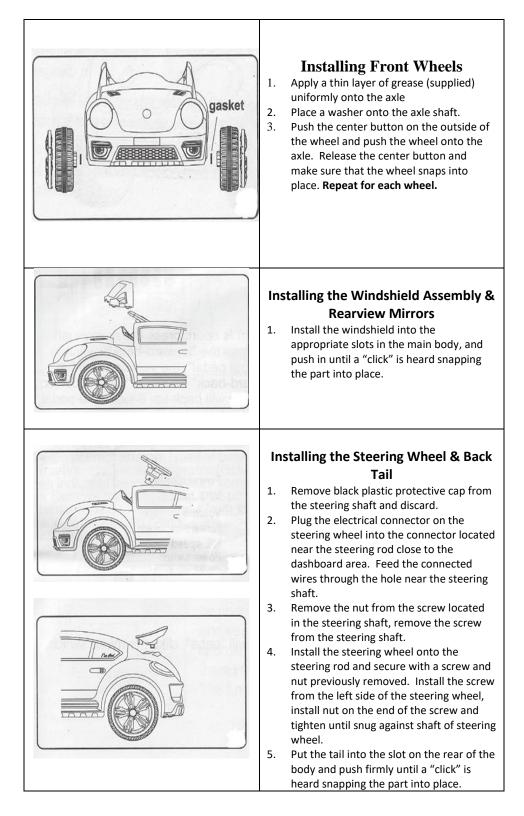


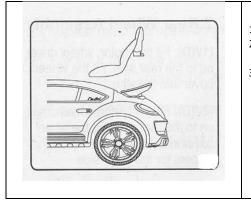



Installing the Seat

- 1. Remove the two screws.
- 2. Set the seat in the appropriate position on the car.
- 3. Insert the two screws and tighten.

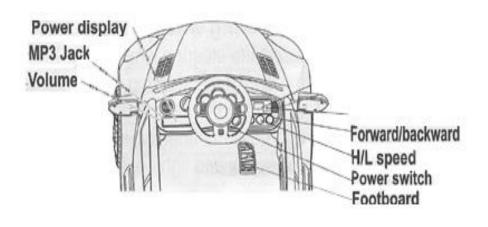

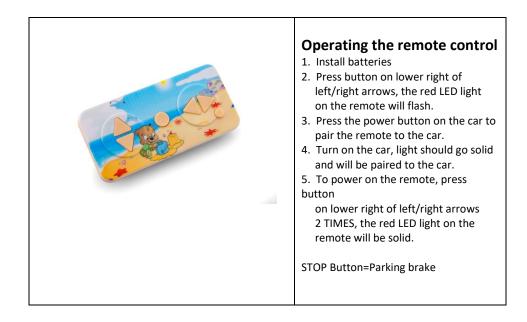

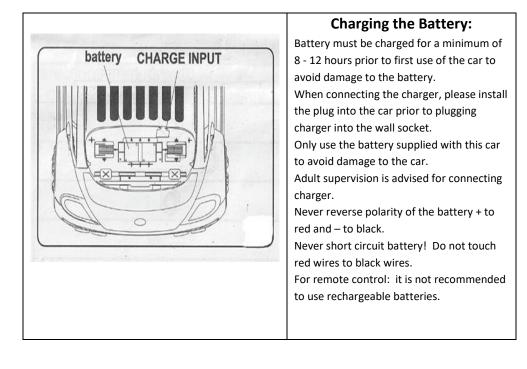

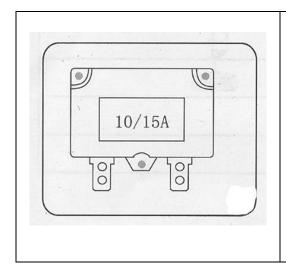

Vehicle stops working:

First check the fuse to see if it is burnt out or broken. If so, replace with a new fuse. There is a spare fuse located under the seat.

WARNING:

- Use only the rechargeable battery and charger supplied with your vehicle. **NEVER** substitute the battery or charger with another brand. Using another battery or charger may cause damage.

- **NEVER** modify the electric circuit system. Tampering with the electric system may cause permanent damage to the system.

- Do not allow direct contact between battery terminals.

- Do not allow any type of liquid on the battery or its components.

- Charge the battery in a well-ventilated area **ONLY**. Do not charge near or around flammable materials.

- **NEVER** pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case **ONLY**.

- Charge the battery in a dry area **ONLY**.

Wash hands after handling.

- **Do not** open the battery. Battery contains lead acid and other materials that are toxic and corrosive.

- **Do not** open the charger. Exposed wiring and circuitry inside case could cause electric shock. **NEVER** allow a child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).

- **Do not** drop the battery. Permanent damage to the battery could occur or cause serious injury.

- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. **DO NOT** charge the battery if any damage to parts has occurred.

- **Do not** allow the battery to drain completely. Recharge the battery after each use or once per month if not used regularly.

- **Do not** charge the battery upside down.

-Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.

- The **Power Switch** must be turned in the **OFF** position when charging.

- When the car begins to run slowly, recharge the battery.

GENERAL MAINTENANCE:

It is the parent's responsibility to check main parts of the toy before using. Regularly examine the car for potential hazard, such as damage to the battery, charger, cable or cord, and plug. Also, check that all screws are tightened throughout the car. In the event of such damage, the toy must not be used until that damage is repaired or replaced.

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult should handle the battery. Recharge the battery at least once a month when not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather as water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- For extended times when the car will not be used, the power switch needs to be in the off position and the electrical connections should be disconnected from the battery.

All assembly videos can be found on YouTube under SPORTrax

TROUBLE SHOOTING GUIDE:

Duchland	Dessible Course	Dessible Colution -
Problem	Possible Cause	Possible Solutions
Car will not move	 Battery voltage is low. Battery connector or wires are loose. 	Charge the battery Re-connect the battery connector to the car
	 Battery is damaged or dead. 	Replace battery
	 Electrical box or motor is damaged 	Replace motor
The battery will not	1. Battery connector may	Re-connect the battery
charge.	have come apart or have a	connector to the car
	bad connection.	electrical connector
	 Battery charger plugged into a bad wall outlet. Battery charger is 	Try another wall outlet
	damaged.	Replace battery charger
Shortened battery life	Battery was not charged fully	Charge battery fully
	Battery is old	Change battery
Some Noise and heat when charging battery	Chemical reaction	Normal
Low Speed	Battery is old	Change the battery
	Battery is low on charge	Charge the battery
	Weight limit exceeded	Do not exceed max weight limit
	Uneven or uphill path	Use on flat surfaces
	Vehicle is being used in harsh	Avoid using car in harsh
	conditions	conditions
Noise coming from motor/gearbox	Gear in motor/gearbox broken	Call for replacement motor
The car shakes when	Bad Connection of the motor	Reconnect wires
moving	wires	Call for replacement
	Possible motor failure	motor
Car needs a push to go	Poor contact of wires and/or	Check that the battery
forward	connectors	connectors are firmly
		plugged into each other. If wires are loose around the motor, contact the distributor's service
	"Dead Spot" on motor	department A dead spot means the electric power is not being delivered to the terminal connection. Call our service department

Self-Resetting Breaker – The vehicle is equipped with a self-resetting breaker. In the event the power is tripped the breaker will reset itself in approximately one minute.

If you are unable to solve a problem, please feel free to contact us.

Phone: 402-477-0541 or Email: customerservice@rollinghillstrading.com